


PHT (15-25) 7.4L 96 Hour - Packing Instructions

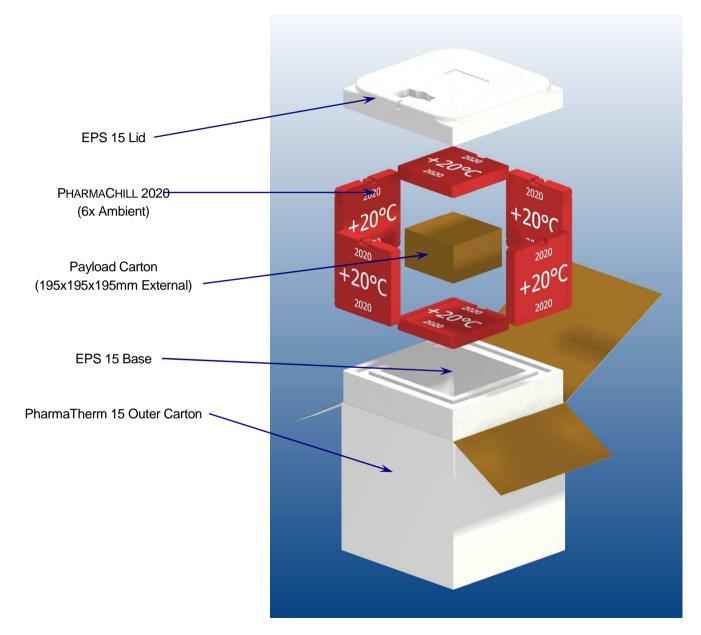

Assembly Instructions

Prepare six PHARMACHILL by conditioning them at +20°C for a minimum of 24 hours.

Once the PHARMACHILL s are fully conditioned, place one ambient PHARMACHILL 2020 into the centre of the EPS 15 base, and add the filled payload carton directly on top of the PHARMACHILL.

Next add an ambient PHARMACHILL 2020 around each side of the payload carton. Next stack the remaining ambient PHARMACHILL 2020 on top of the payload carton, as pictured.

Finally apply the EPS 15 box lid, then close and seal the outer carton. The system is now ready to be shipped.

